




LINT TILE

FOAM BOX NICHES



Waterproof Niches

1-800-245-5564

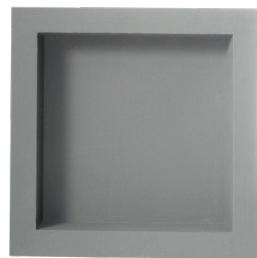

15.75" x 15.75" x 4"
recess-
12.25" x 12.25" x 3.5"
#FB-NIC-SQN



15.75" x 23.75" x 4"
recess-
12.25" x 20.5" x 3.5"
#FB-NIC-MN



15.75" x 23.75" x 4"
recesses-
12.25" x 6.25" x 3.5"
12.25" x 12.25" x 3.5"
#FB-NIC-WCN

NICHE INSTALLATION
(For complete instructions see Data Sheet)

FOAM BOX NICHES



One Substrate Layer

Determine desired height of niche and draw level line between studs on outside of substrate layer.

Place niche with the bottom of flange centered on the level line and trace along exterior flange of niche.

Install niche to cross bracing and studs using a polyurethane adhesive/sealant. Silicone should never be used.

Treat exterior joint with polyurethane sealant to ensure waterproof integrity.

Install tile using a modified thinset mortar.

Two Substrate Layer

Determine desired height of niche and draw level line between studs on outside substrate layer.

Place niche with the bottom of the box centered on the level line and trace outline of the back of niche box.

Cut through both layers along line and remove layers. Place niche into opening and trace exterior flanges.

Remove niche and set aside.

Cut through outside layer only and remove "picture frame" outline.

Install niche using a polyurethane adhesive/sealant.


Treat exterior joint with polyurethane sealant to ensure waterproof integrity.

Install tile using a modified thinset mortar.

Tile within minutes of Installation.



1-800-245-5564

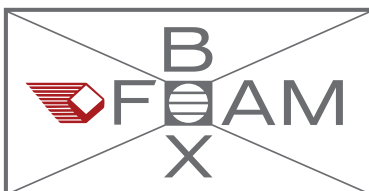

linttile.com

111 Notch Lane

Wendel, PA 15691

